

BLUETOOTH KEYBOARD FOR DUALSHOCK®4 WIRELESS CONTROLLER

EN

CONTENTS:

1 x Bluetooth keyboard for use with DUALSHOCK®4 wireless controller

SAFETY INFORMATION:

- Do NOT short circuit or burn.
- The keyboard is NOT a toy.
- Keep dry at all times. Do NOT immerse in liquids.
- For indoor use only.
- Do NOT attempt to disassemble. Unit does not include serviceable parts.
- Avoid dropping, shaking or any hard impacts on the product.


TECHNICAL SUPPORT:

If you encounter a problem, please visit www.numskull.com/technical-support

Alternatively you can contact us:

- By email - hello@numskull.com
- UK telephone - 01707 800881
- International telephone - +44 (0)1707 800881

BLUETOOTH KEYBOARD LAYOUT

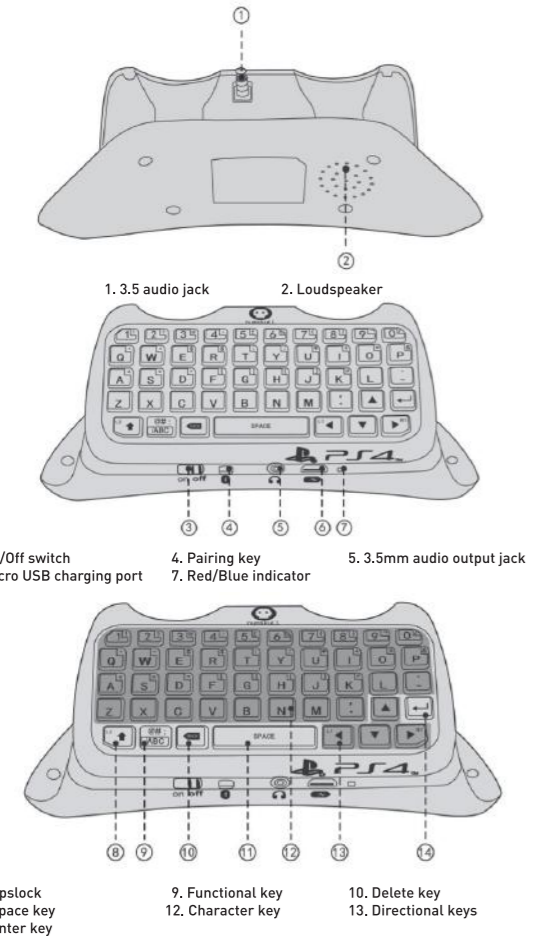

1. 3.5 audio jack
2. Loudspeaker
3. On/Off switch
4. Micro USB charging port
5. 3.5mm audio output jack
6. Pairing key
7. Red/Blue indicator
8. Capslock
9. Functional key
10. Delete key
11. Space key
12. Character key
13. Directional keys
14. Enter key

CONNECTION INSTRUCTIONS

INSTRUCTIONS:

- Connect your Bluetooth keyboard to your DUALSHOCK®4 wireless controller via the controller 3.5mm jack.
- Turn on your PS4™ system and DUALSHOCK®4 wireless controller.
- Turn on the keyboard with the On/Off switch - the blue indicator will light up.
- Press and hold the Pairing Key for 3 seconds to begin pairing the device. The indicator will flash until pairing is complete.
- On your PS4™ system, go to 'Settings', then 'Devices' then 'Bluetooth Device'.
- Find the device named 'Numskull Bluetooth Keyboard' and then select to pair.
- Enter the passkey displayed by your console and then select it to pair with your controller.

OTHER FUNCTIONS:

- To type the symbols in pink, press and hold and the corresponding symbol key.
- To type capital letters, press one and then the letter. Press this key to unlock this function.

ADDITIONAL NOTES:

- When the indicator flashes twice in blue this means the keyboard needs charging. Connect any micro USB charging cable (not included) to charge the device - the indicator turns red when charging and turns off once fully charged.
- The Bluetooth pairing mode will stay active for 3 minutes.
- When the Bluetooth connection is lost the keyboard will go into sleep mode. To deactivate sleep mode simply press any key within the effective Bluetooth range.
- The keyboard should be paired automatically with the PS4™ console after the first pairing. If the re-connection fails, please follow the connection instructions to pair again.
- In the PS4™ console setting [Setting → Device → Audio Devices → Input Device → Headset Connected to Controller], you can adjust the volume and microphone levels once the keyboard is inserted into the PS4™ controller via the earphone jack. This is only applicable if a headset with microphone function is connected to the 3.5mm audio output jack.

WARRANTY INFORMATION

Worldwide, Rubber Road Ltd warrants to the consumer that this Numskull product will be free from material defects and manufacturing flaws for a period of one (1) year from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase for any other location indicated by Technical Support.

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorised by applicable law, the full liability of Rubber Road and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Numskull product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Rubber Road, said software being subject to a specific warranty provided by its publisher.

"PlayStation", "PS4" and "XBOX" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved. Licensed for sale in Europe, Africa, Middle East, Russia, India and Oceania and for use exclusively with PlayStation®4. Manufactured by Rubber Road Ltd, United Kingdom, AL7 1HH (RubberRoad.co.uk).

Autorisé à la vente en Europe, en Afrique, au Moyen-Orient, en Russie, en Inde et en Océanie pour une utilisation exclusive avec PlayStation®4. Fabriqué par Rubber Road Ltd, Royaume-Uni, AL7 1HH (RubberRoad.co.uk).

Autorizzato per la vendita in Europa, Africa, Medio Oriente, Russia, India e Oceania. Da utilizzare esclusivamente con PlayStation®4. Fabbriato da Rubber Road Ltd, Regno Unito, AL7 1HH (RubberRoad.co.uk).

Lizenziert für den Verkauf in Europa, Afrika, Naher Osten, Russland, Indien und Ozeanien und ausschließlich mit PlayStation®4. Hergestellt von Rubber Road Ltd, Großbritannien, AL7 1HH (RubberRoad.co.uk).

Licenciado para su venta en Europa, África, Oriente Medio, Rusia, India y Oceanía. Para uso exclusivo con PlayStation®4. Fabricado por Rubber Road Ltd, United Kingdom, AL7 1HH (RubberRoad.co.uk).

MADE IN JAPAN

AUSTRALIAN & NEW ZEALAND WARRANTY

These goods come with guarantees that cannot be excluded under the Australian Consumer Law and New Zealand Consumer Guarantees Act. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If purchased in Australia or New Zealand, this product comes with one year (12 months) warranty from date of purchase. Defects in the product must have appeared within one year from date of purchase, in order to claim warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailers returns policy and procedures. Any expense incurred as a result of returning the product to the retailer of purchase are the full responsibility of the customer.

AUSTRALIA Bluemouth Interactive Level 2, 2 Darling Street South Yarra VIC 3141, Australia Phone: (03) 9867 2666 Email - Support@bluemouth.com.au Visit - www.bluemouth.com.au	NEW ZEALAND Fiveight Distribution Ltd Unit B, 39 Westpoint Drive Hobsbawville Auckland 0618, New Zealand Phone: (64) 9 479 1530 Email - info@fiveight.co.nz Visit - http://www.fiveight.co.nz
---	--

Retain this information, colours and decorations may vary.

TECLADO BLUETOOTH PARA O CONTROLADOR SEM FIOS DUALSHOCK®4

PT

CONTEÚDOS:

1 x teclado Bluetooth para utilizar com o controlador sem fios DUALSHOCK®4

INFORMAÇÃO DE SEGURANÇA:

- NÃO provocar curto-circuito ou queimar.
- O teclado NÃO é um brinquedo.
- Mantenha-o sempre seco. NÃO mergulhar em líquidos.
- Para uso interno apenas.
- NÃO tentar desmontar. A unidade não inclui peças que requeiram manutenção.
- Evitar deixar cair, abanar ou qualquer impacto forte no produto.


APOIO TÉCNICO:

Se encontrar um problema, por favor visite o site: www.numskull.com/technical-support

Em alternativa, pode contactar-nos:

- por email - hello@numskull.com
- telefone [Reino Unido] - 01707 800881
- telefone internacional - +44 (0)1707 800881

CONFIGURAÇÃO DO TECLADO BLUETOOTH

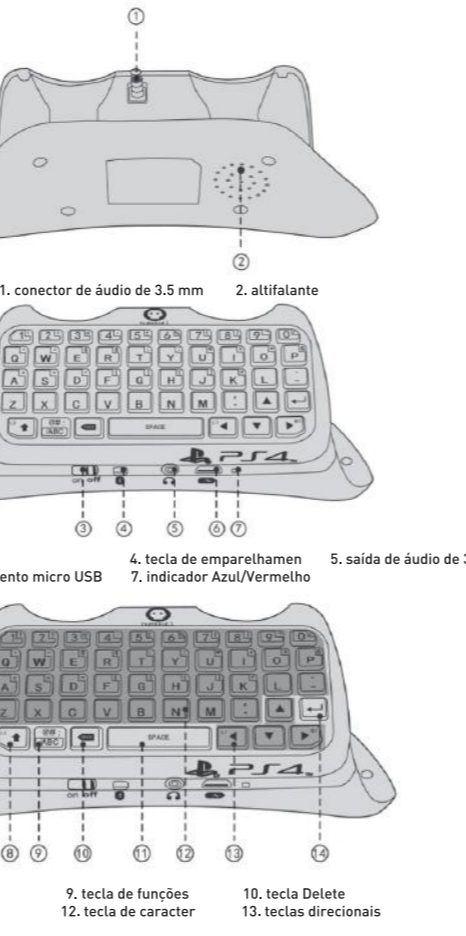

1. conector de áudio de 3.5 mm
2. altifalante
3. interruptor On/Off
4. porta de carregamento micro USB
5. saída de áudio de 3.5 mm
6. tecla de emparelhamento
7. indicador Azul/Vermelho
8. tecla capslock
9. tecla de funções
10. tecla Delete
11. tecla de espaço
12. tecla de carácter
13. teclas direcionais
14. tecla Enter

INSTRUÇÕES DE LIGAÇÃO

INSTRUÇÕES:

- Conecte o seu teclado Bluetooth ao seu controlador sem fios DUALSHOCK®4 através do conector de 3.5 mm do controlador.
- Ligue o seu sistema PS4™ e o controlador sem fios DUALSHOCK®4.
- Ligue o teclado no interruptor On/Off - o indicador azul acenderá.
- Pressione e mantenha premida a tecla de emparelhamento durante 3 segundos para começar a emparelhar o dispositivo. O indicador irá piscar até o emparelhamento terminar.
- No seu sistema PS4™, aceda a "Definições", depois a "Dispositivos", depois a "Dispositivo Bluetooth".
- Encontre o dispositivo "Numskull Bluetooth Keyboard" e seleccione-o para o emparelhar.
- Insira a palavra-chave indicada na sua consola e depois seleccione-a para o emparelhar com o seu controlador.

OUTRAS FUNÇÕES:

- Para escrever os símbolos a cor-de-rosa, pressione e mantenha premido e a tecla de símbolo correspondente.
- Para escrever em letras maiúsculas, pressione uma vez e depois na letra. Pressione nesta tecla para desbloquear esta função.

NOTAS ADICIONAIS:

- Quando o indicador piscar duas vezes a azul, isso significa que o teclado precisa de ser carregado. Conecte qualquer cabo de carregamento micro USB (não incluído) para carregar o dispositivo - o indicador fica vermelho durante o carregamento e desliga-se quando está totalmente carregado.
- O modo de emparelhamento Bluetooth ficará ativo durante 3 minutos.
- Quando a ligação Bluetooth se perde, o teclado entra no modo sleep. Para desativar o modo sleep, pressione qualquer tecla dentro do alcance efetivo do Bluetooth.
- O teclado deverá emparelhar automaticamente com a consola PS4™ depois do primeiro emparelhamento. Se a re-conexão falhar, siga as instruções de conexão para emparelhar de novo.
- Nas configurações da consola PS4™ (Configurações Dispositivo Dispositivos Áudio Dispositivo de entrada Auricular ligado ao controlador), pode ajustar os níveis do volume e do microfone assim que o teclado for inserido no controlador PS4™ através do conector do auscultador. Isto apenas é aplicável se um auricular com função de microfone estiver ligado ao conector de saída áudio de 3.5 mm.

INFORMAÇÃO DA GARANTIA

Em todo o mundo, a Rubber Road Ltd garante ao consumidor que este produto Numskull está livre e defeitos de material e de defeitos de fabrico durante um período de dois (2) anos a partir da data original de aquisição. Se o produto apresentar defeito durante o período de garantia, contacte imediatamente o Apoio Técnico, que lhe indicará os procedimentos a tomar. Se o defeito se confirmar, o produto deverá ser devolvido no local de aquisição (ou outro local indicado pelo Apoio Técnico).

Dentro do contexto desta garantia, o produto com defeito será, de acordo com o Apoio Técnico, reparado ou substituído. Quando autorizado por legislação aplicável, a responsabilidade total da Rubber Road Ltd e das suas subsidiárias (incluindo por danos indiretos) está limitada à reparação ou substituição do produto Numskull. Os direitos legais do consumidor, respeitantes à legislação aplicável à compra de bens de consumo, não são afetados por esta garantia.

Esta garantia não se aplica: (1) se o produto for modificado, aberto, alterado ou tiver sofrido danos resultantes de uso inadequado ou abusivo, negligência, de um acidente, uso normal, ou outra causa não relacionada com um defeito de material ou de fabrico; (2) na eventualidade de incumprimento das instruções fornecidas pelo Apoio Técnico; (3) ao software não editado pela Rubber Road Ltd, que estará sujeito a uma garantia específica fornecida pelo seu editor.

São marcas comerciais registadas da Sony Interactive Entertainment Inc. Todos os direitos reservados. Licenciado para venda na Europa, África, Médio Oriente, Rússia, Índia e Oceânia e para uso exclusivo com a PlayStation®4.


Produzido pela Rubber Road Ltd, Reino Unido, AL7 1HH (RubberRoad.co.uk).

ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) or recycling.

This is confirmed by the symbol found on the product, user manual or packaging. Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment.

Please contact your local authorities for information on the collection point nearest you.



www.numskull.com